


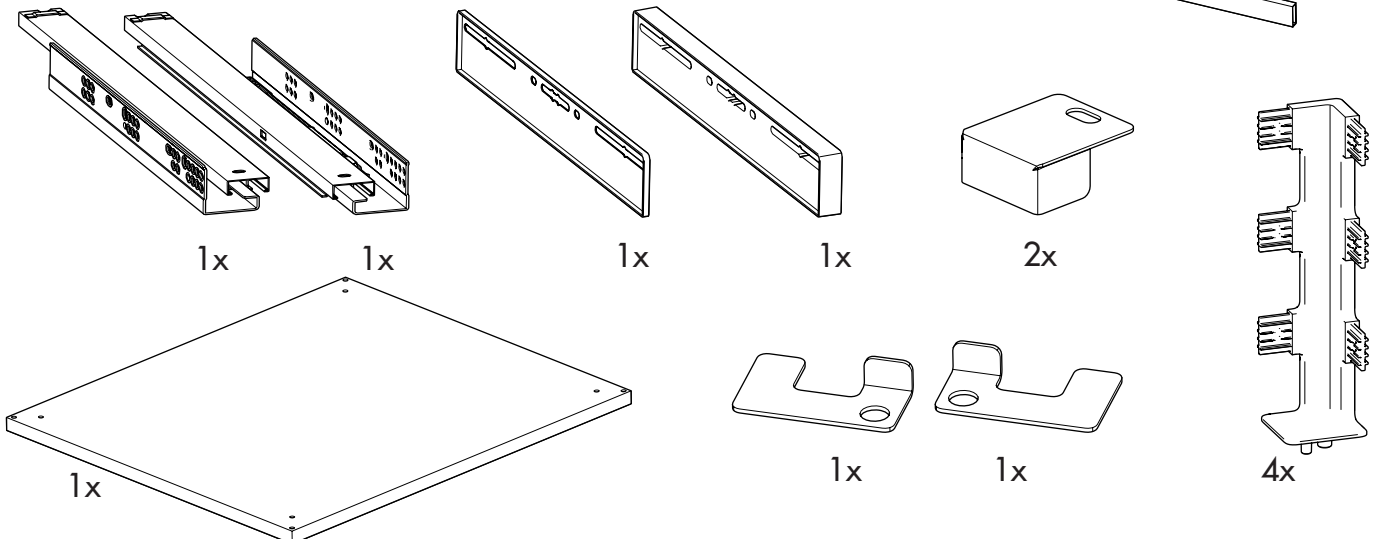
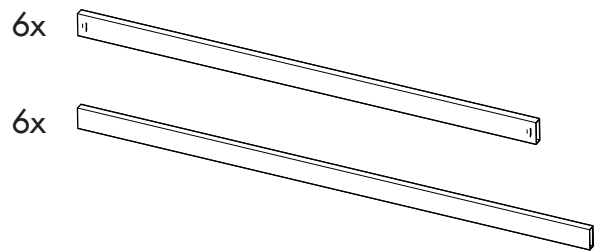
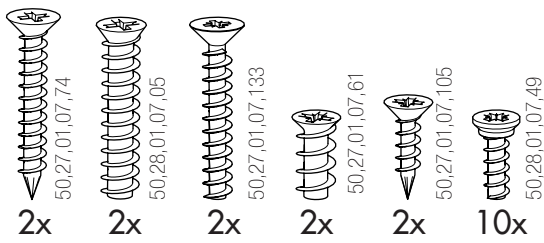
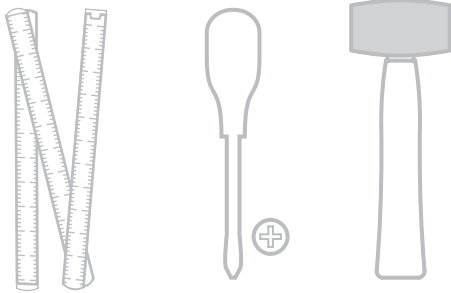
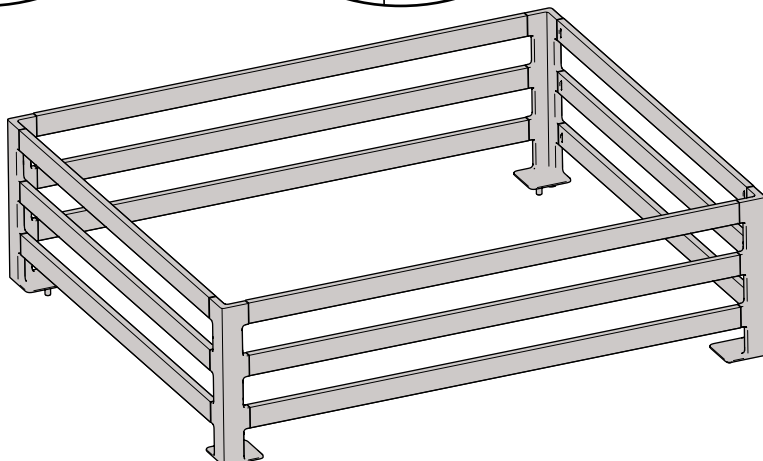
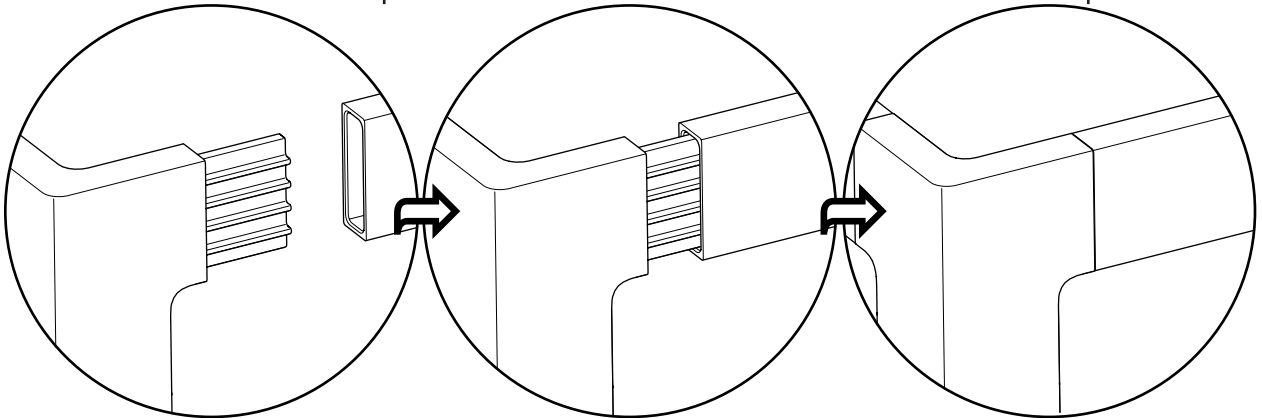
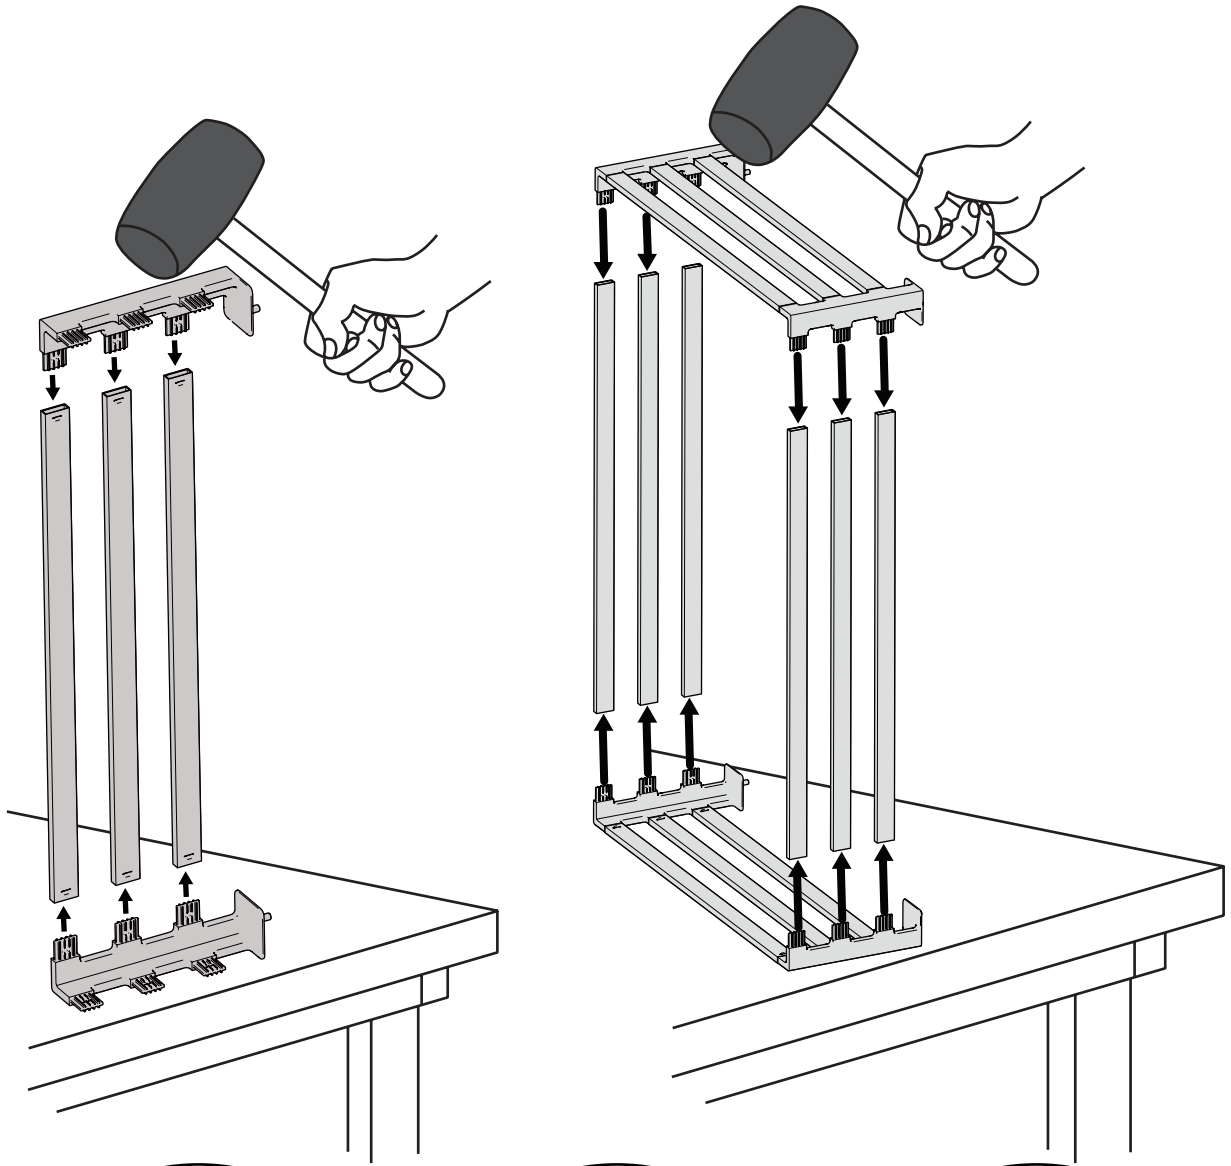
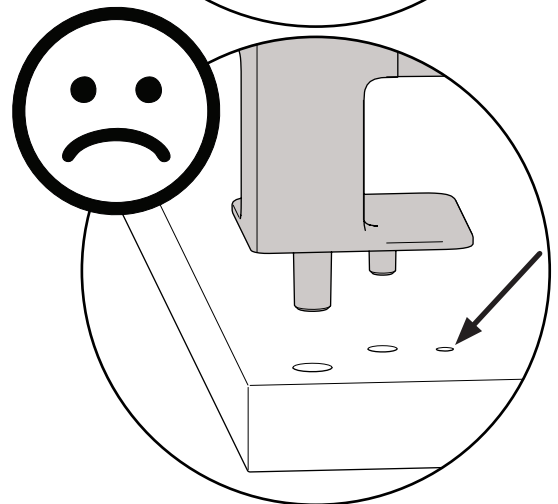
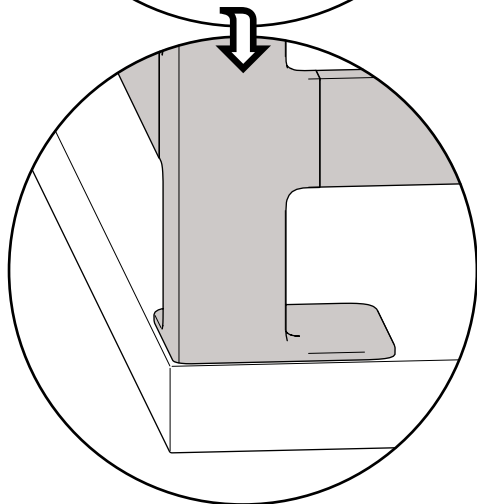


Tray Rail 400 / 500 / 600


5285 5287 5288

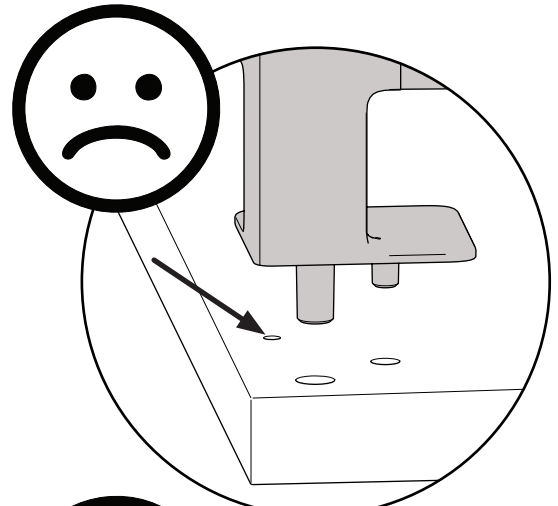

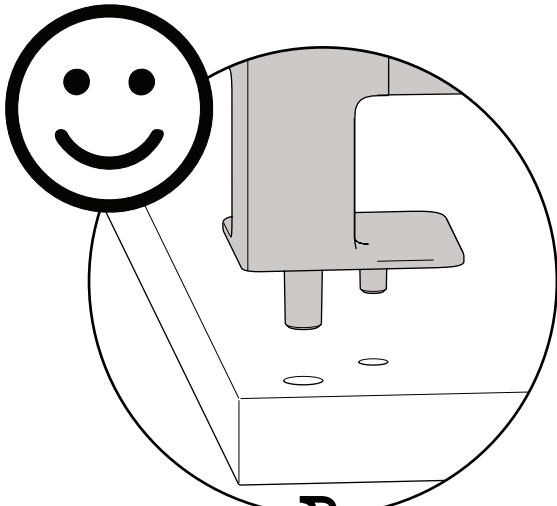


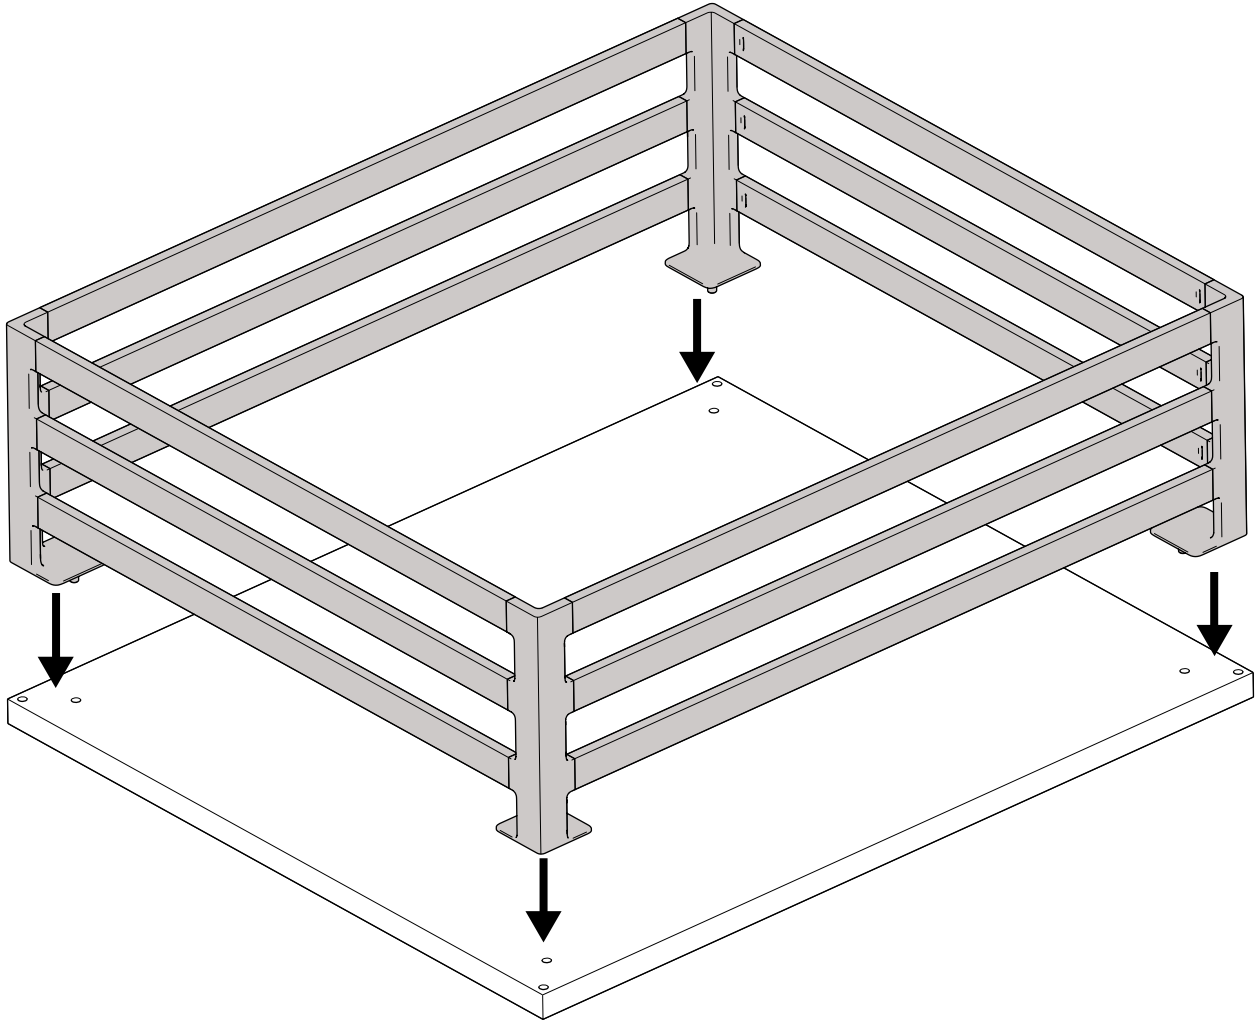

3

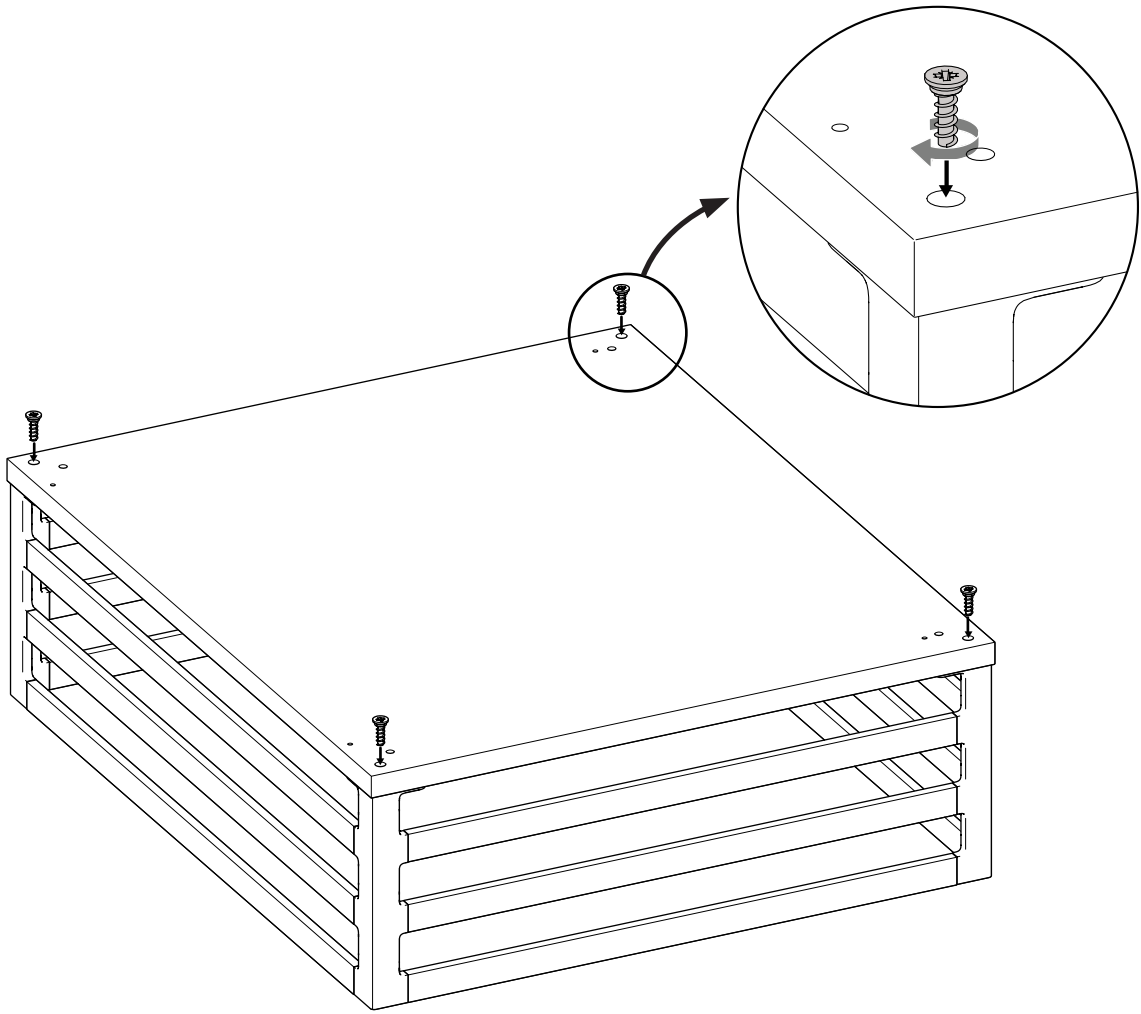


4

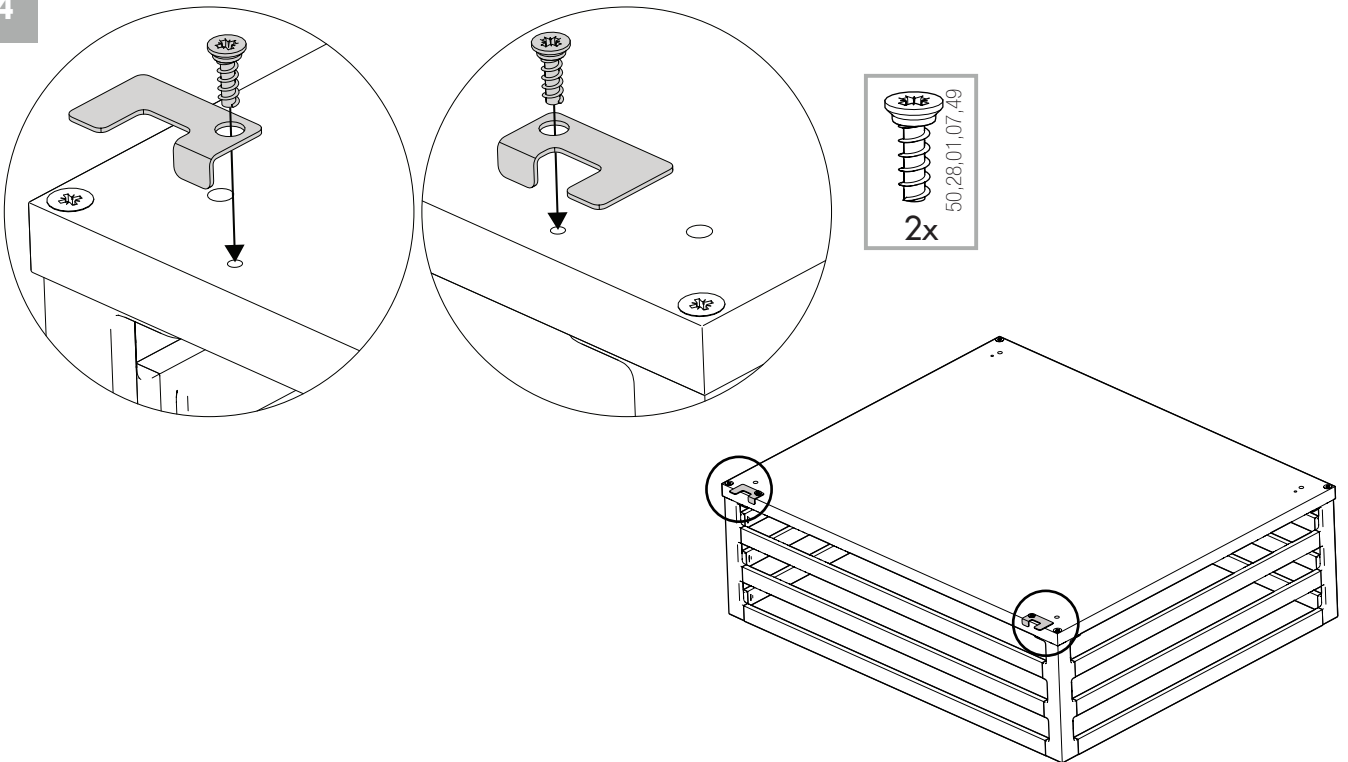

! Mount Bottom Drawer First !


Mount Bottom Drawer


Steps **6** → **7** → **8**


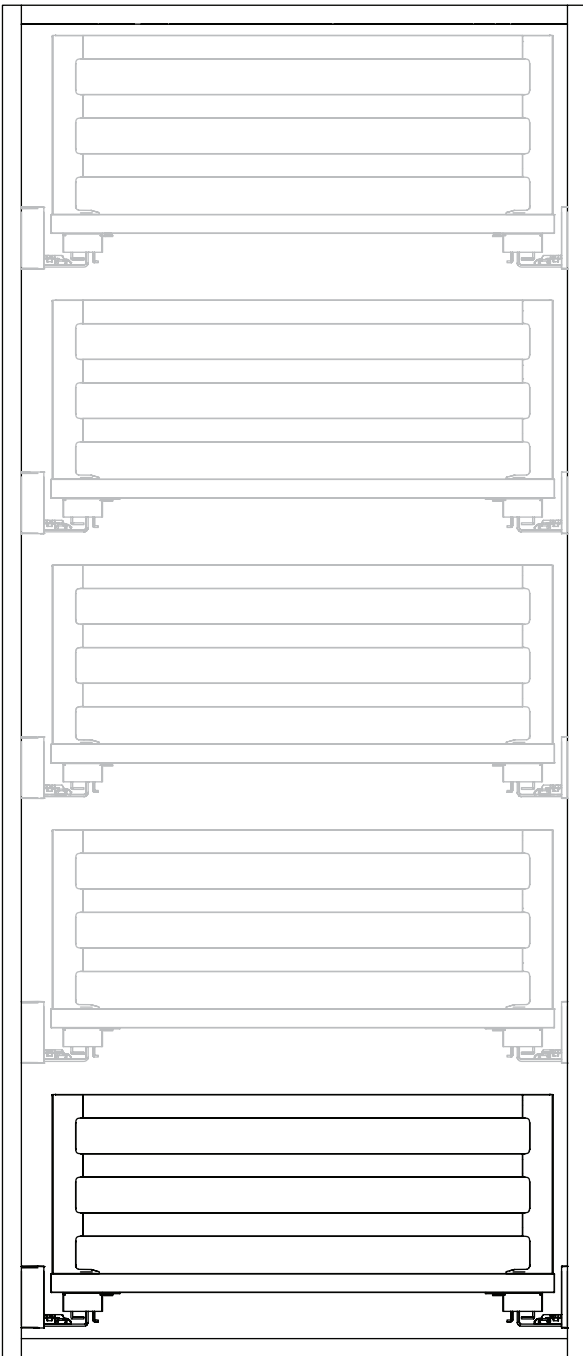


Mount Drawer

Steps **8** → **9** → **10**

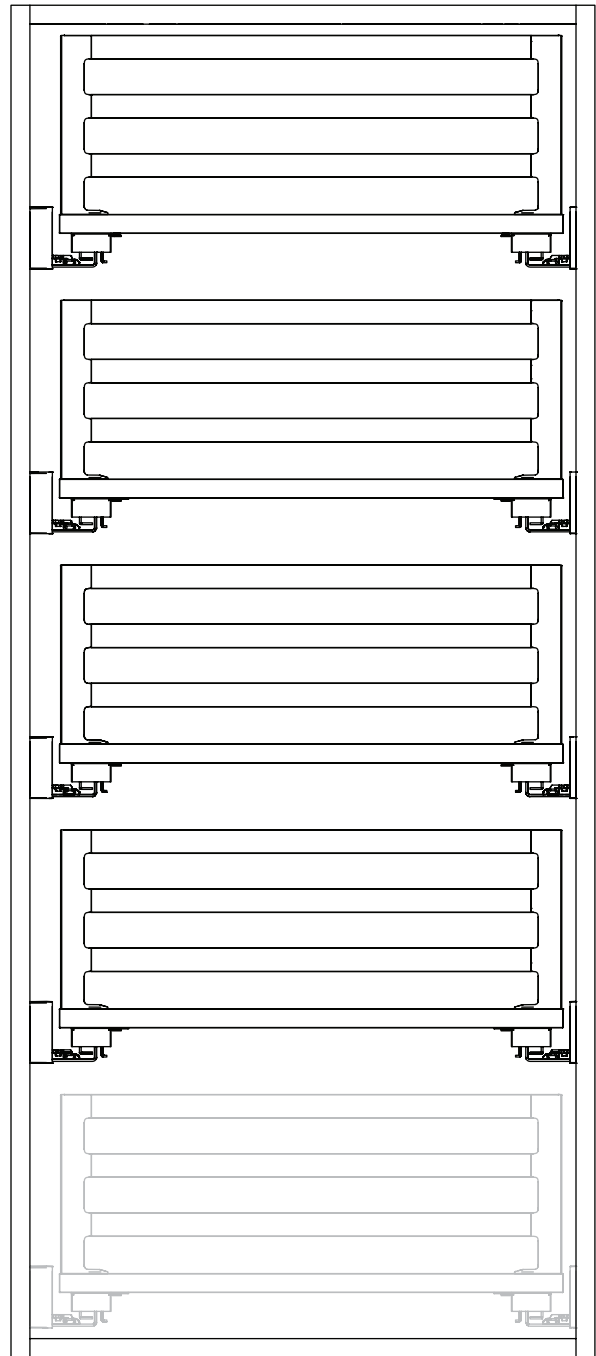


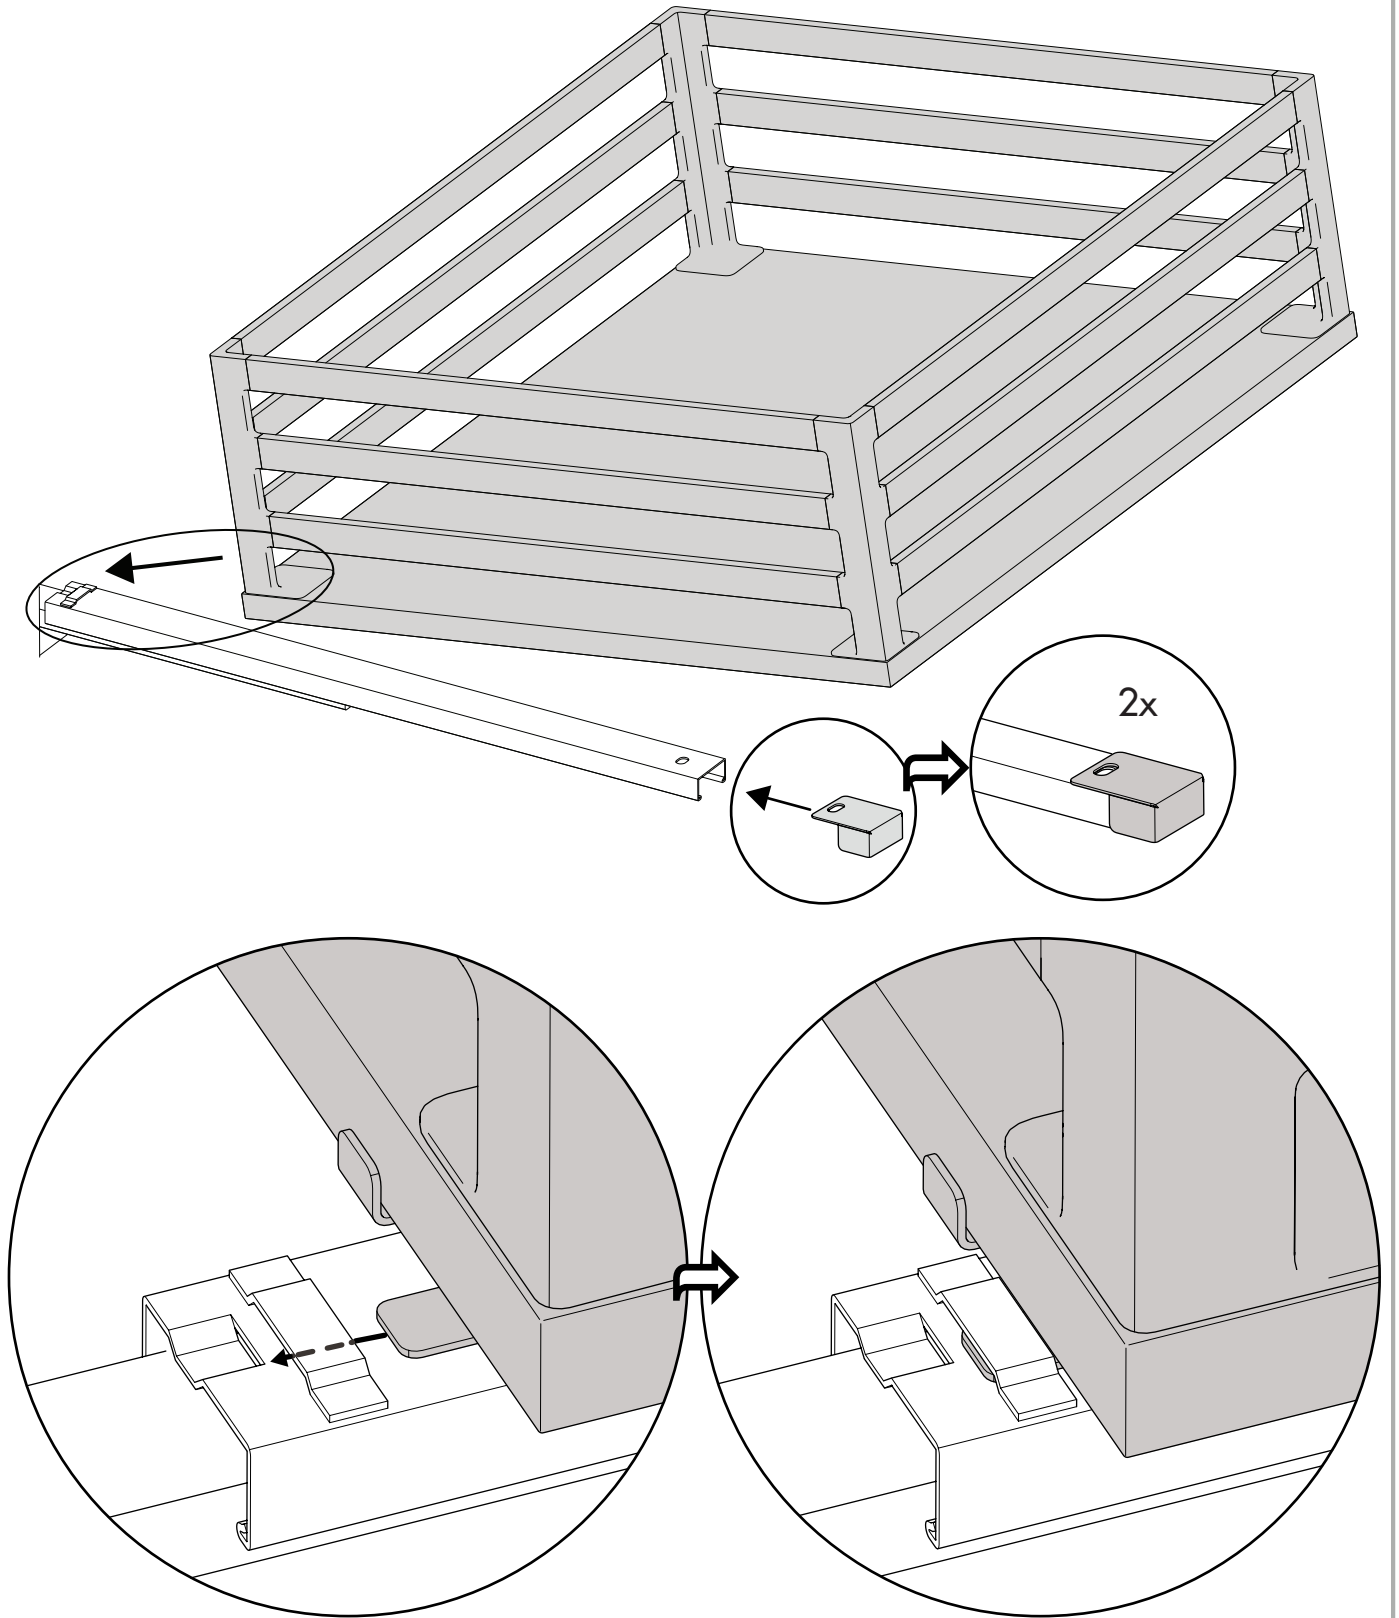








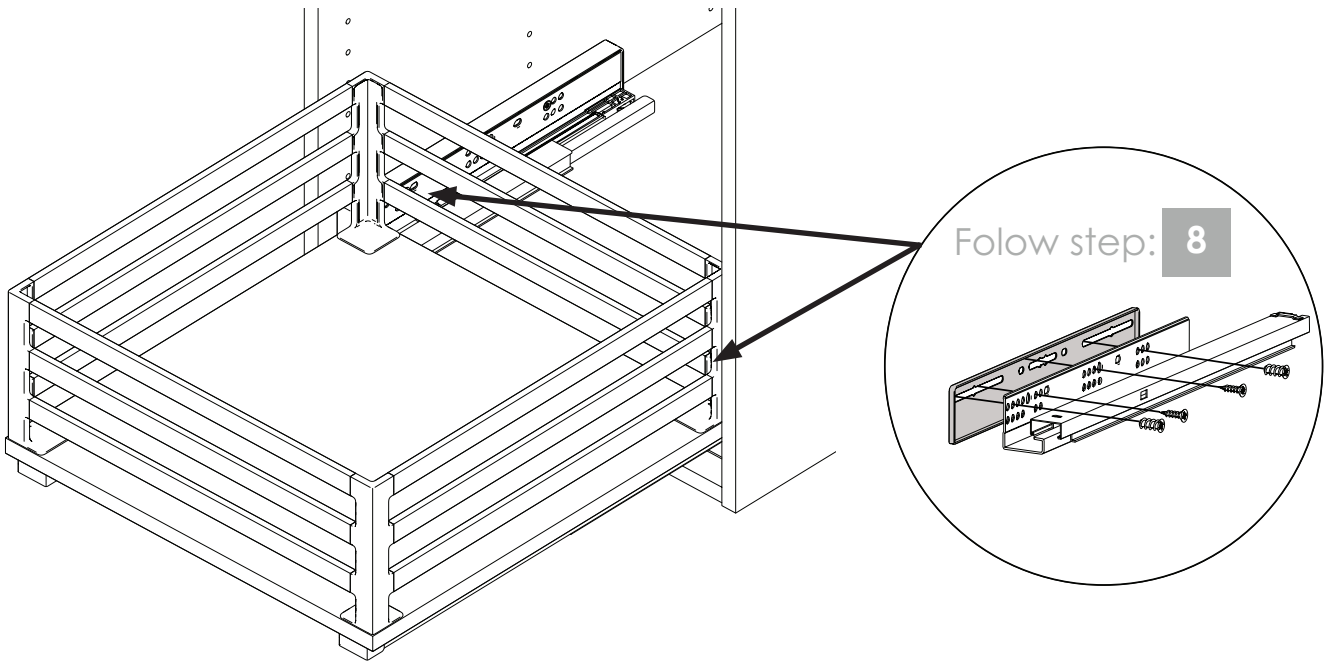
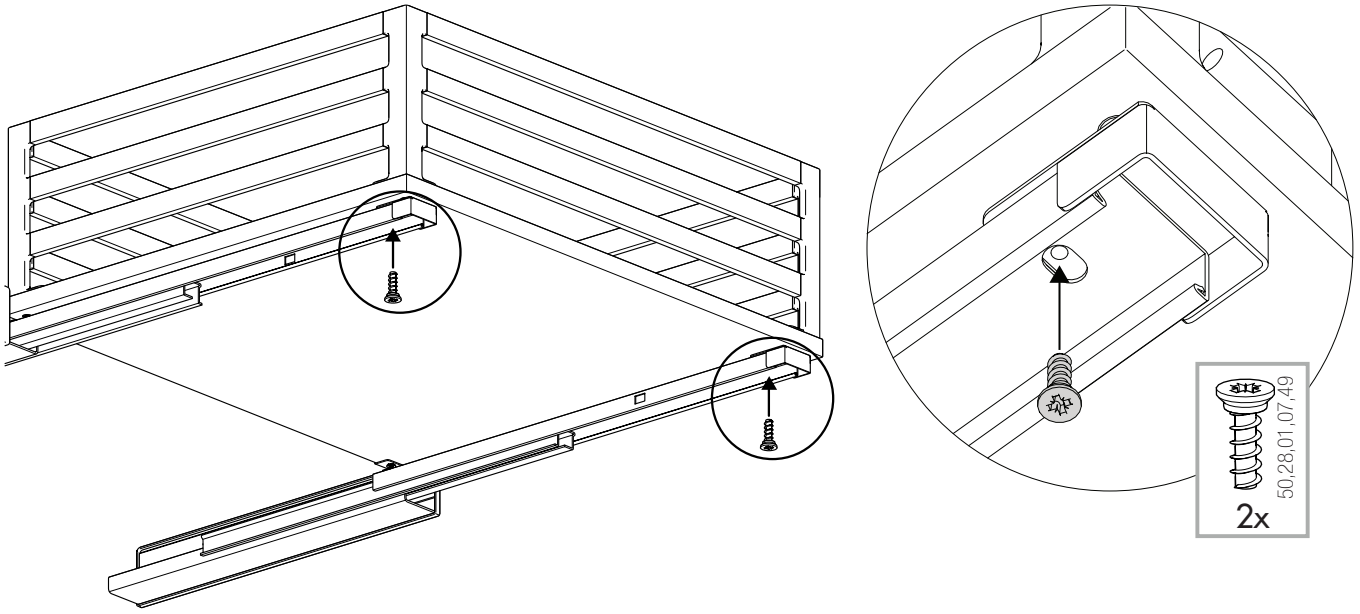


i

22mm

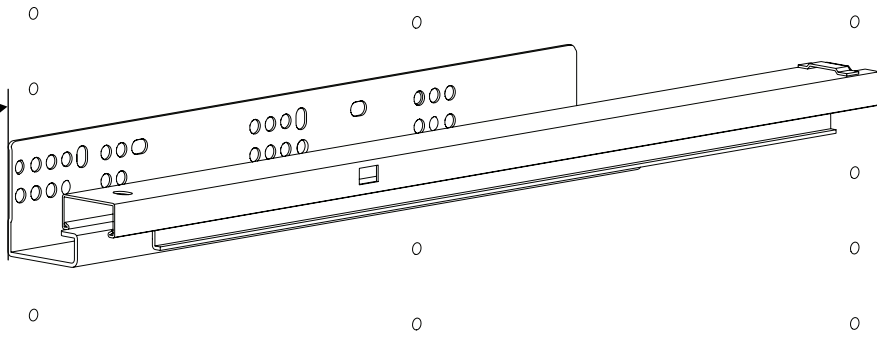

8

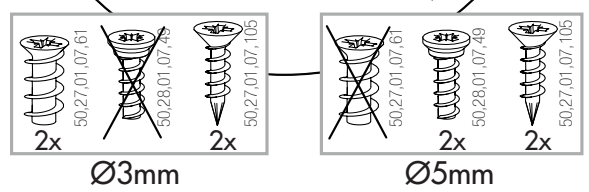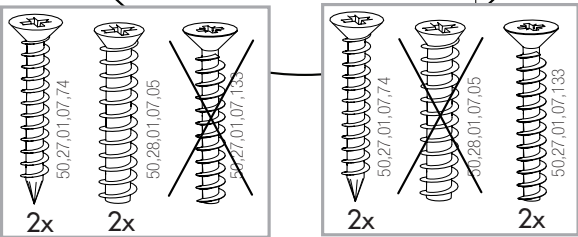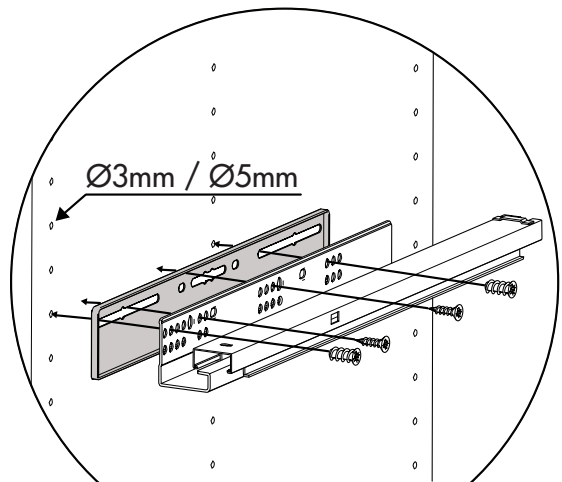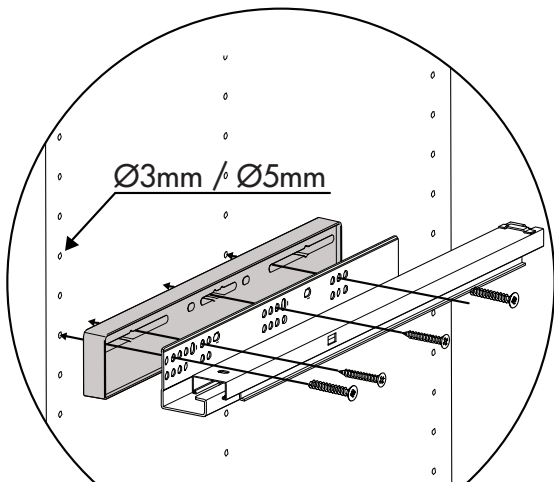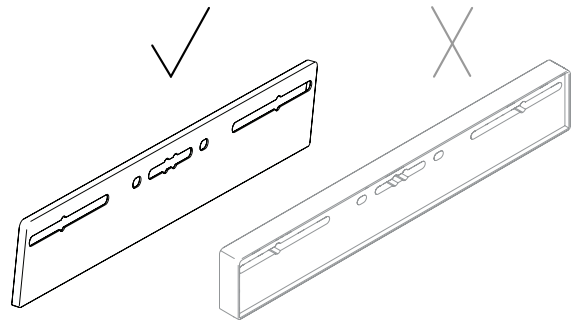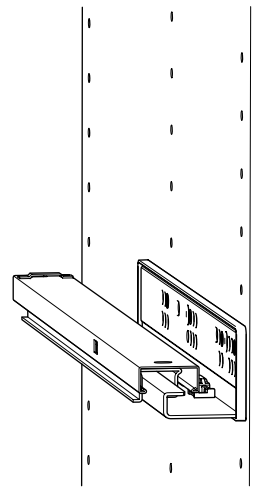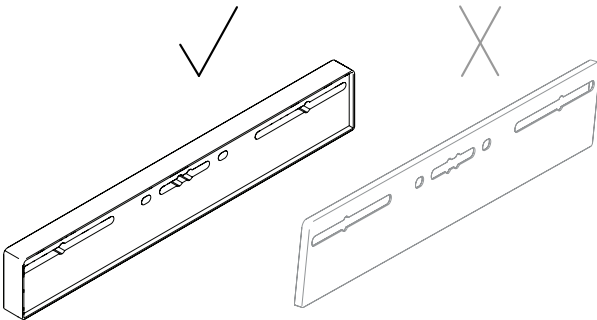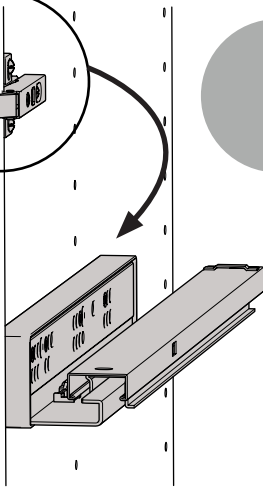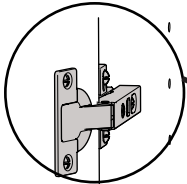

Ø3mm

Ø5mm

Ø3mm

Ø5mm

