


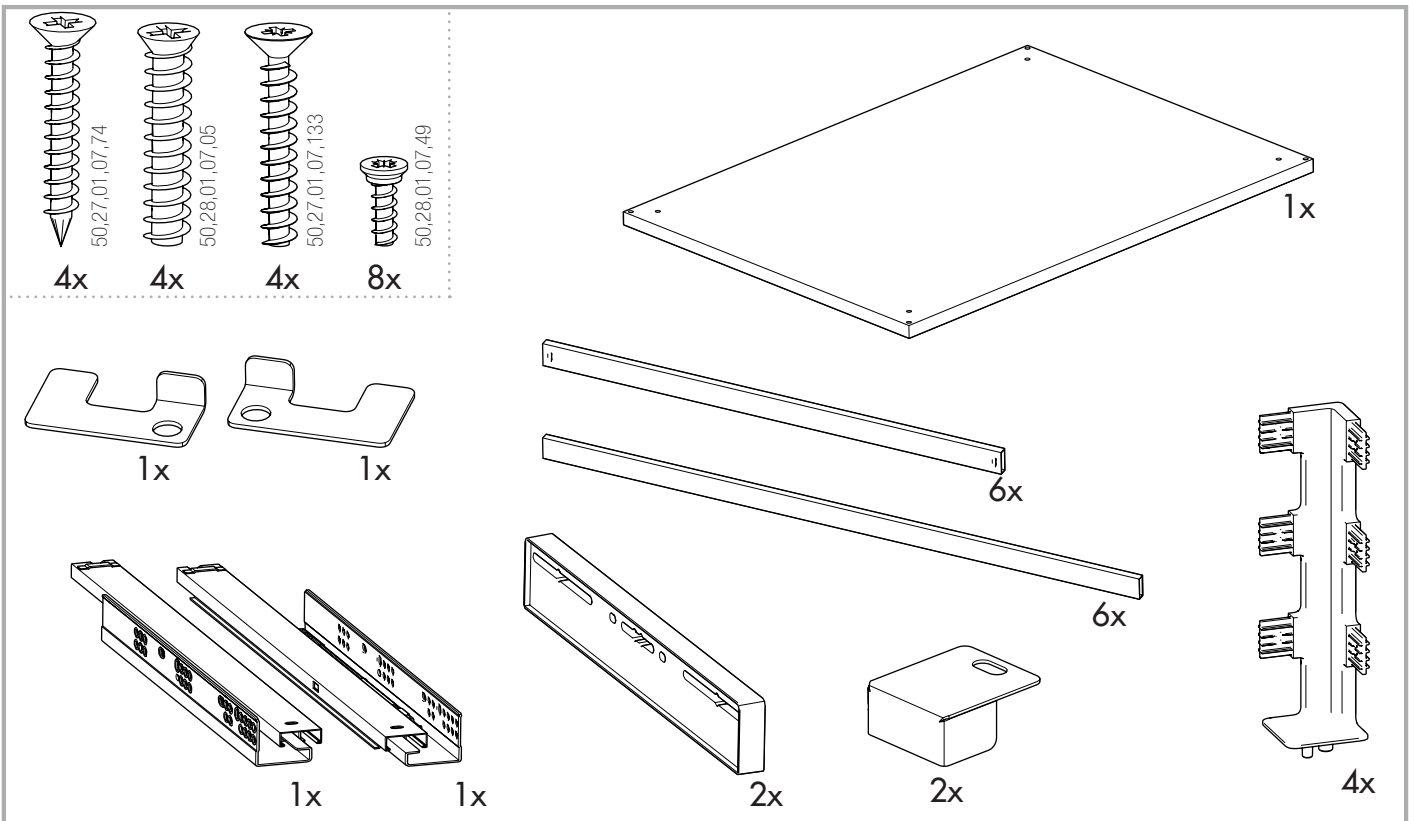
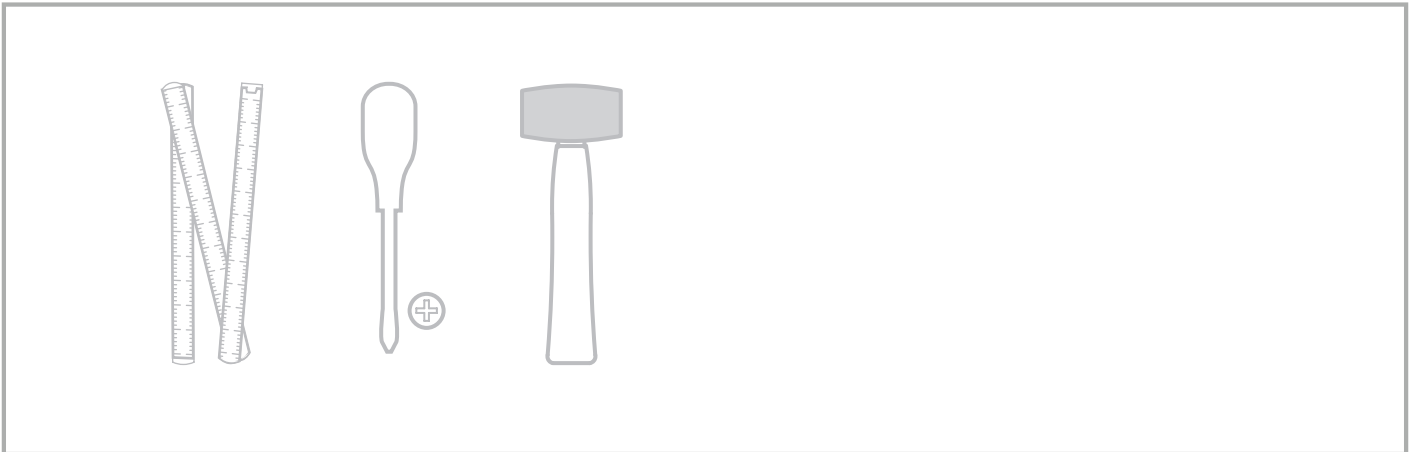
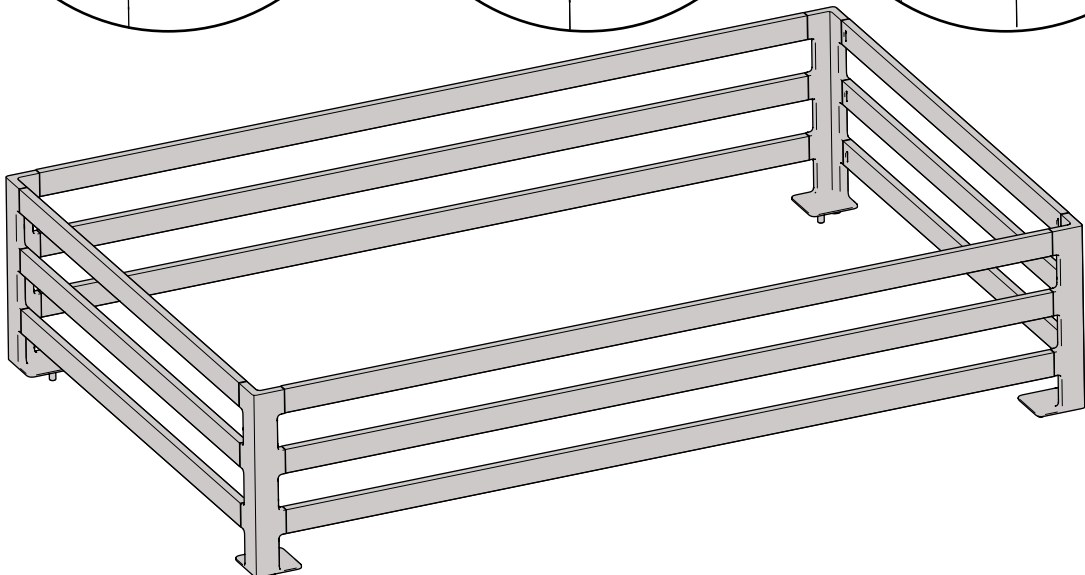
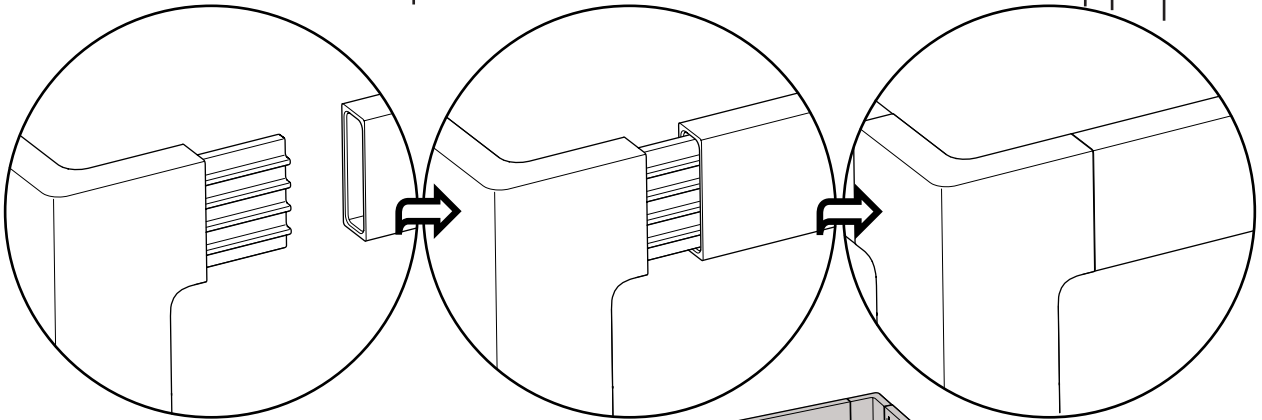
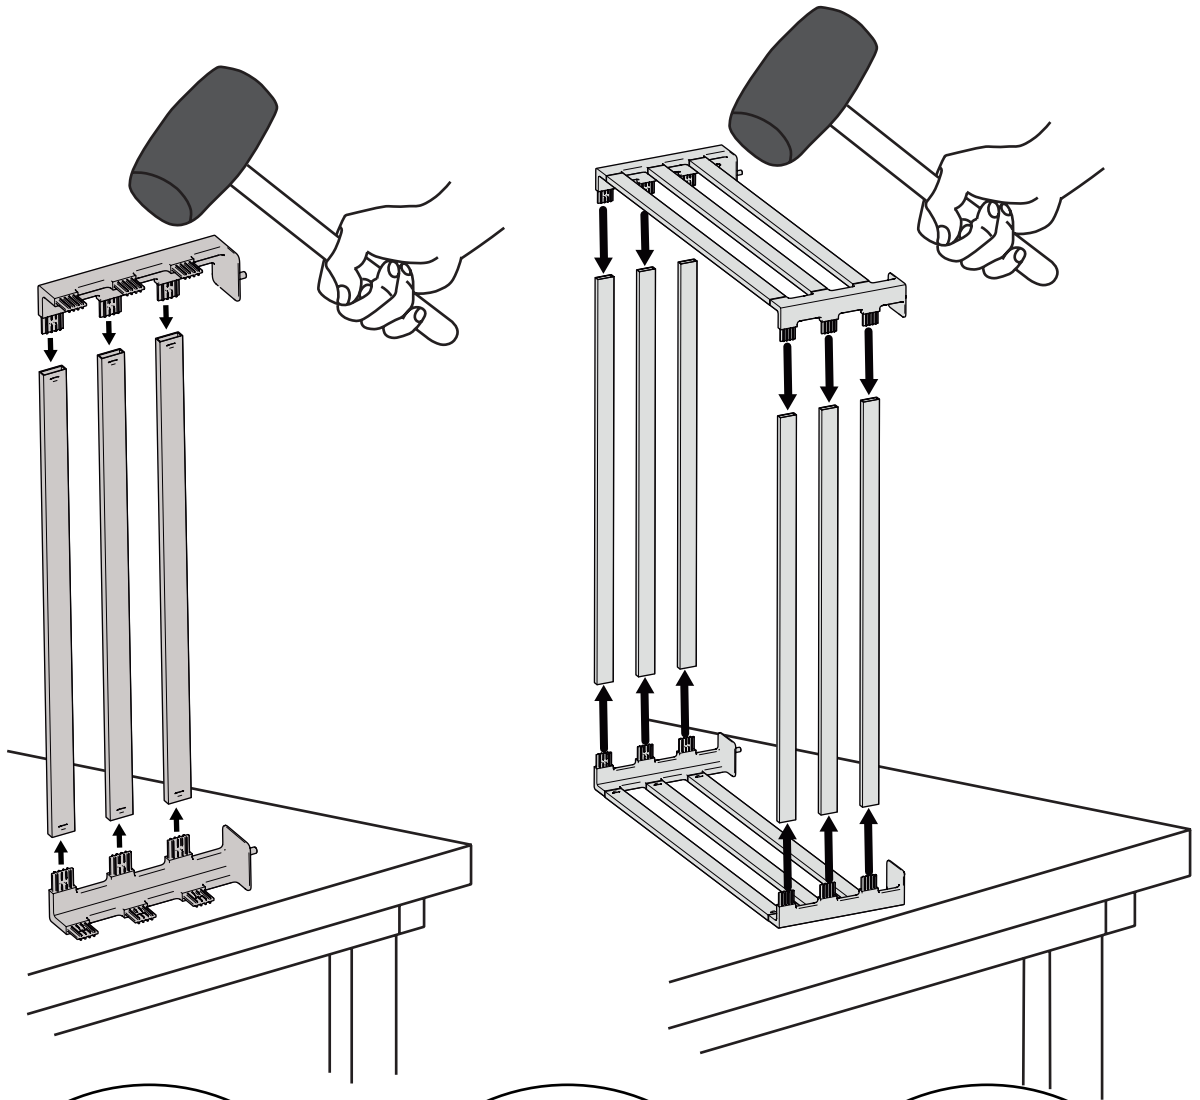
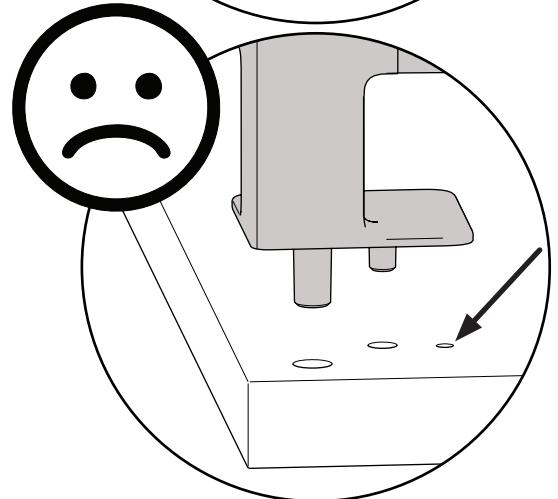
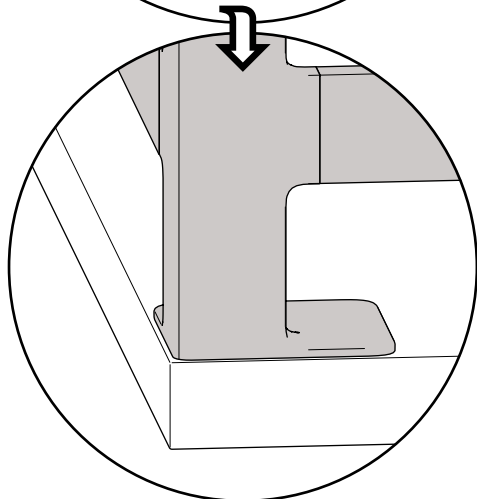


Tray Rail 800


5289

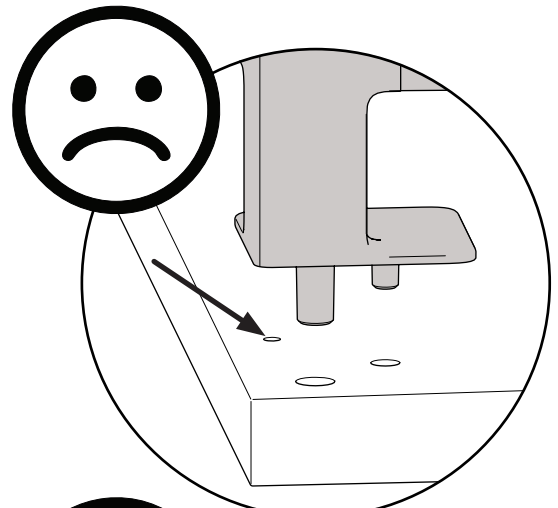

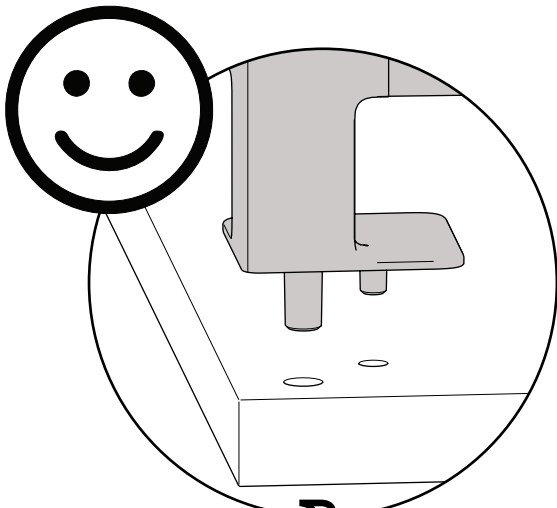


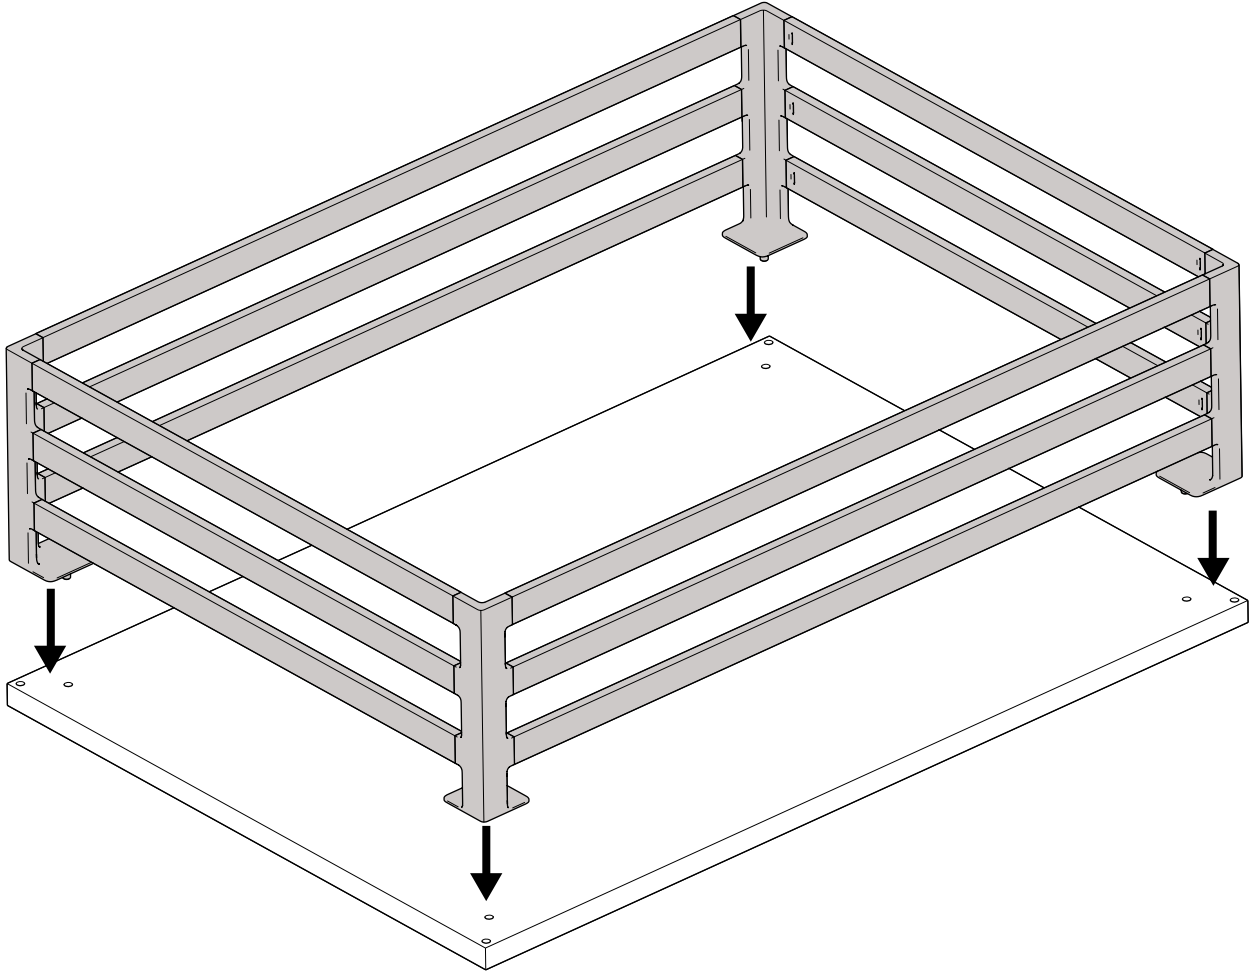

3

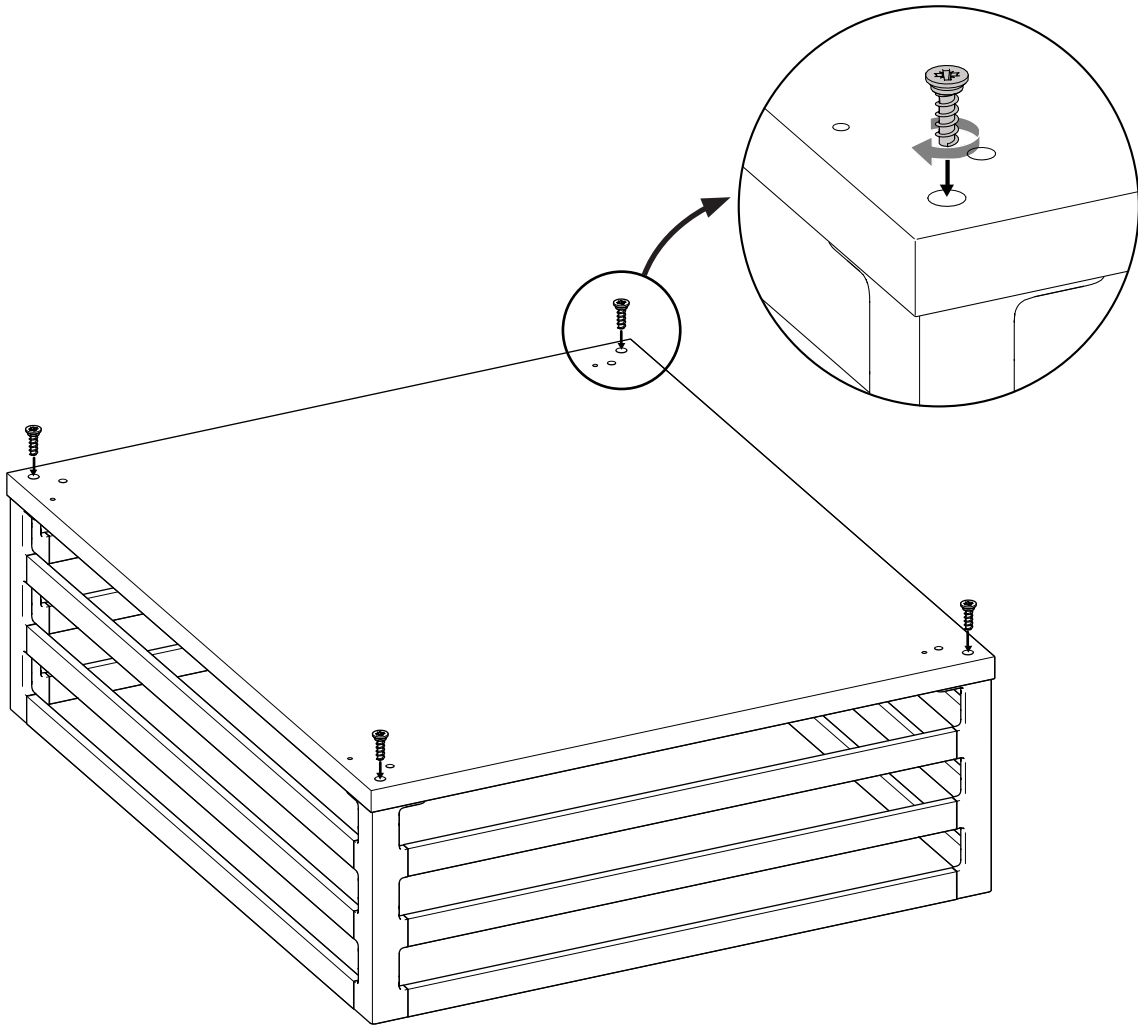


4

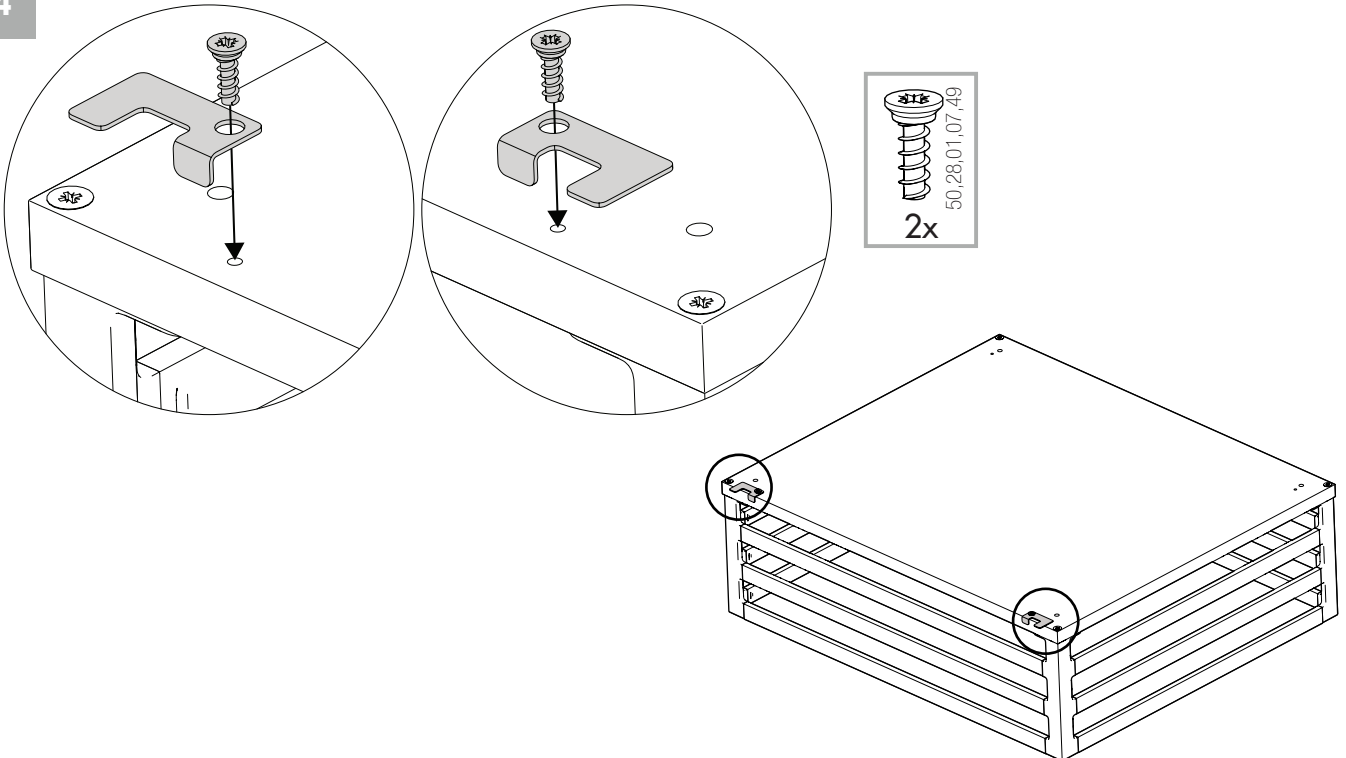

! Mount Bottom Drawer First !


Mount Bottom Drawer


Steps **6** → **7** → **8**


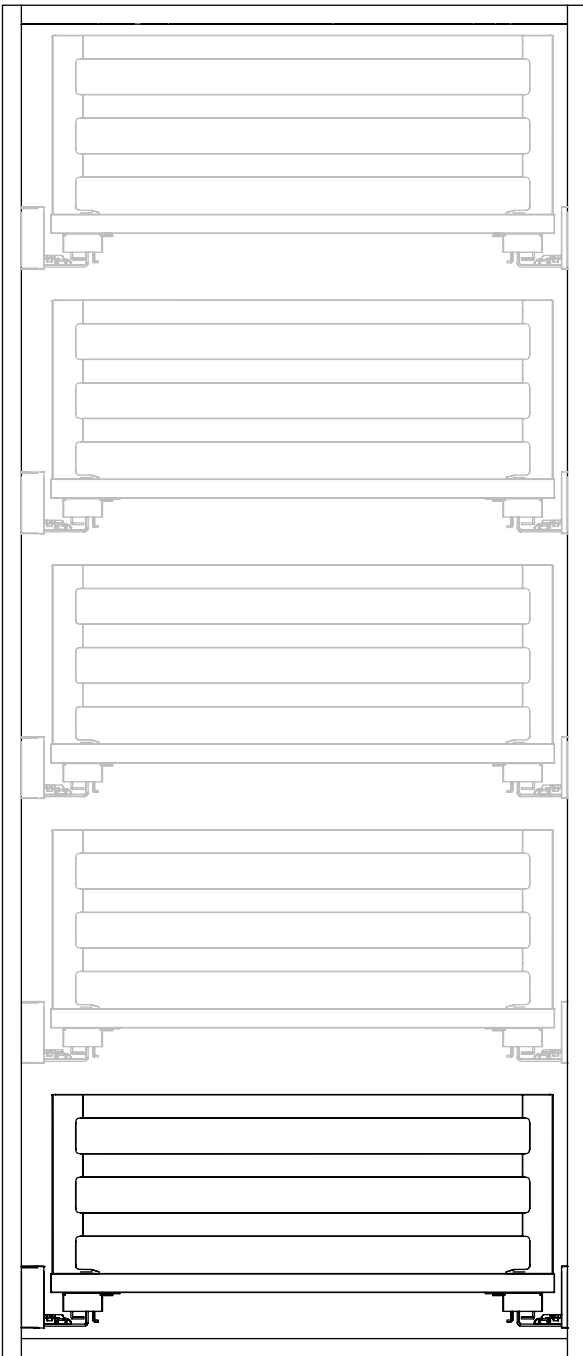


Mount Drawer

Steps **8** → **9** → **10**

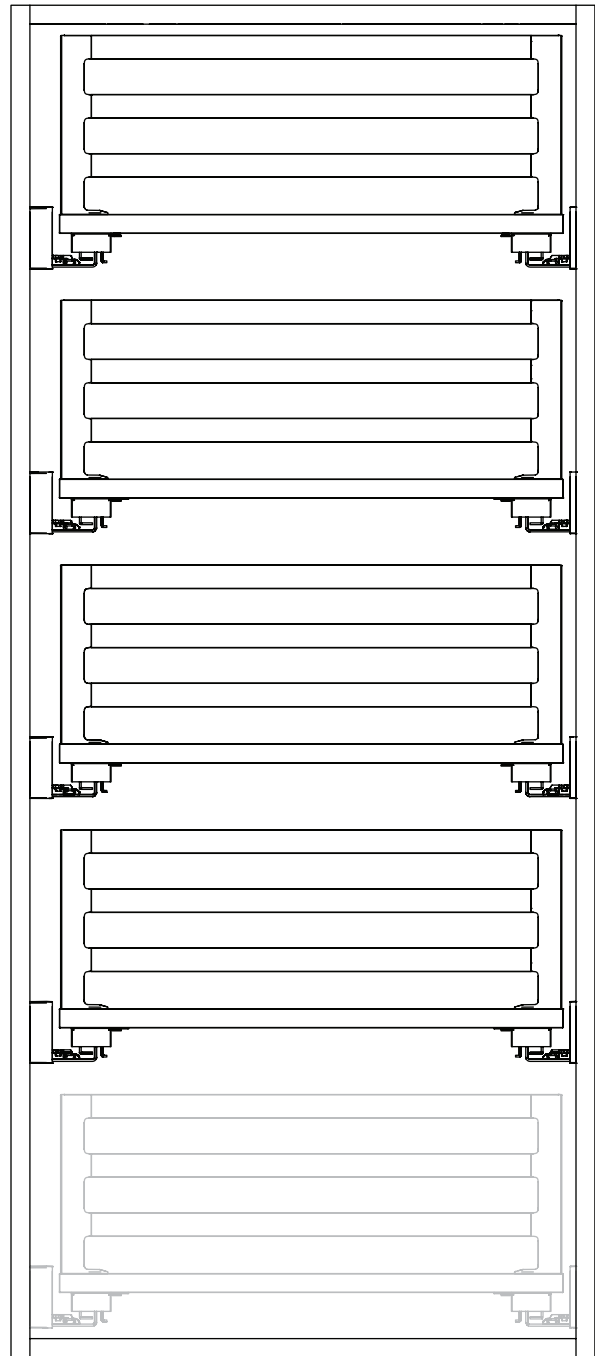


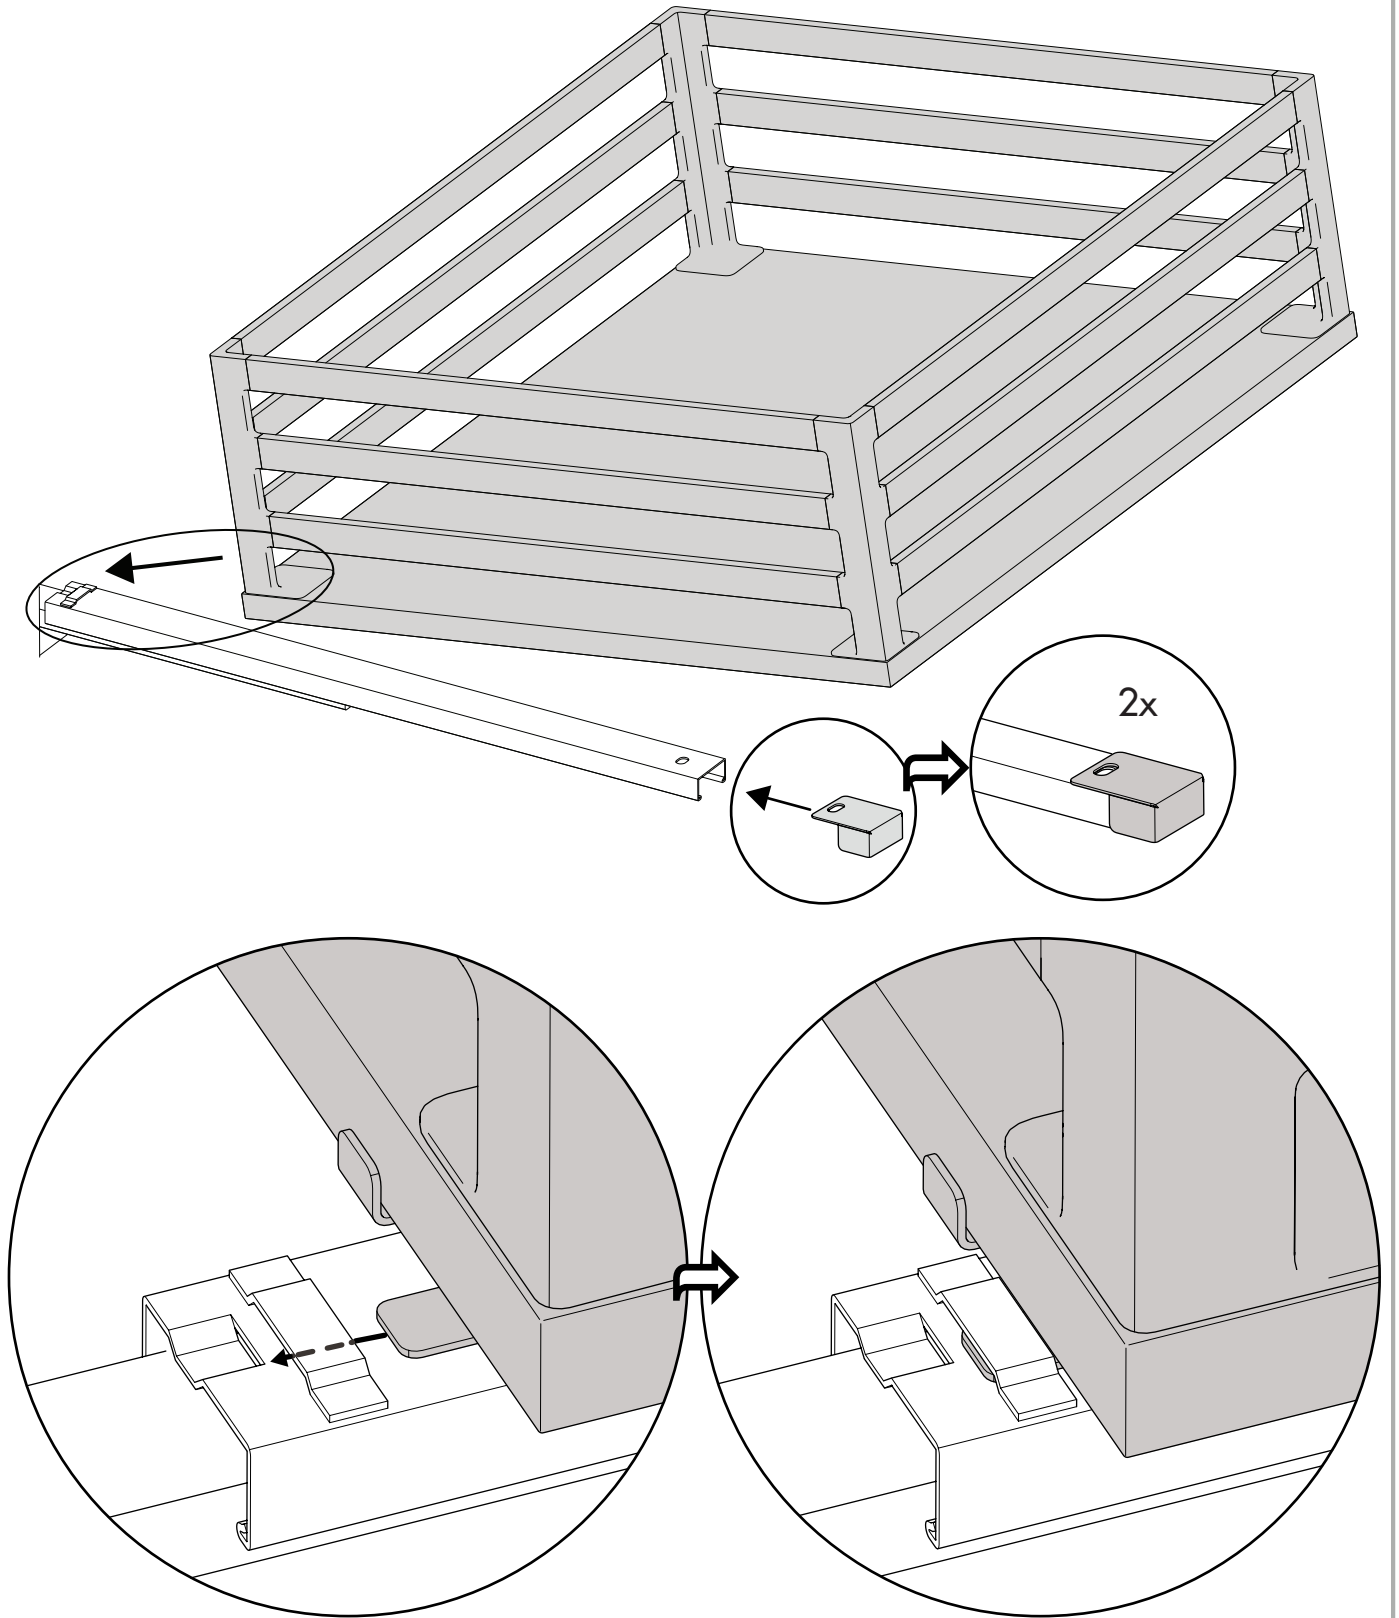


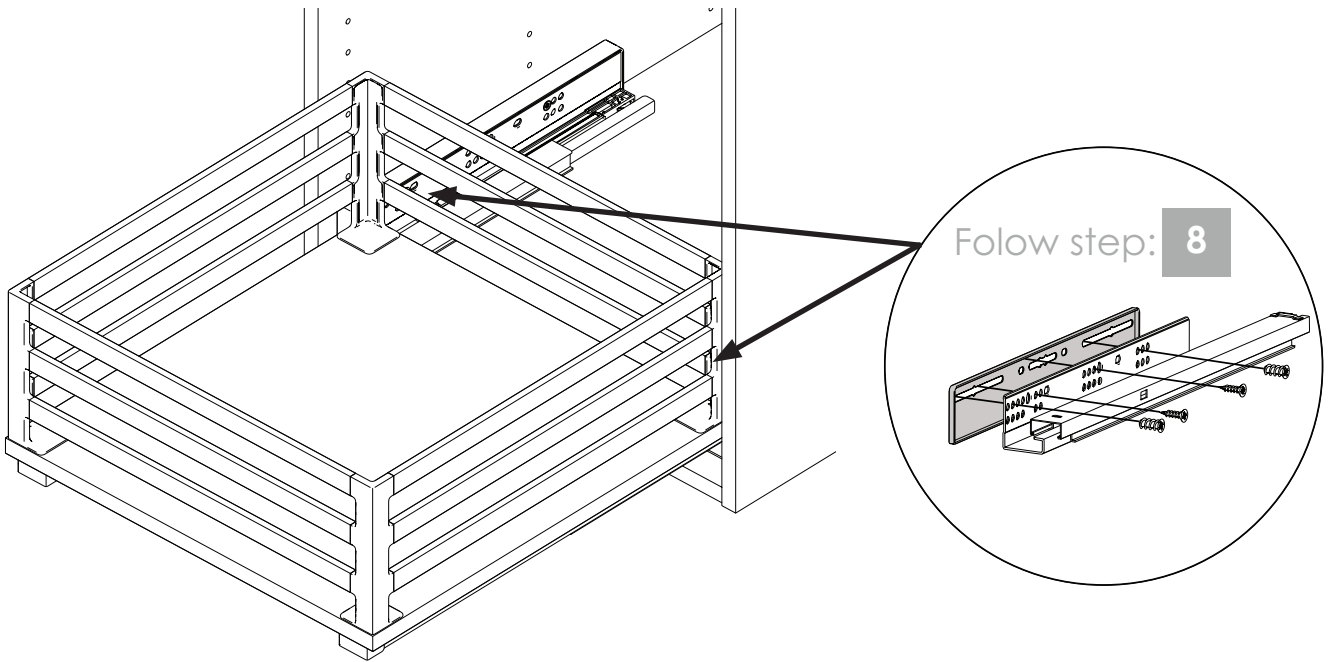
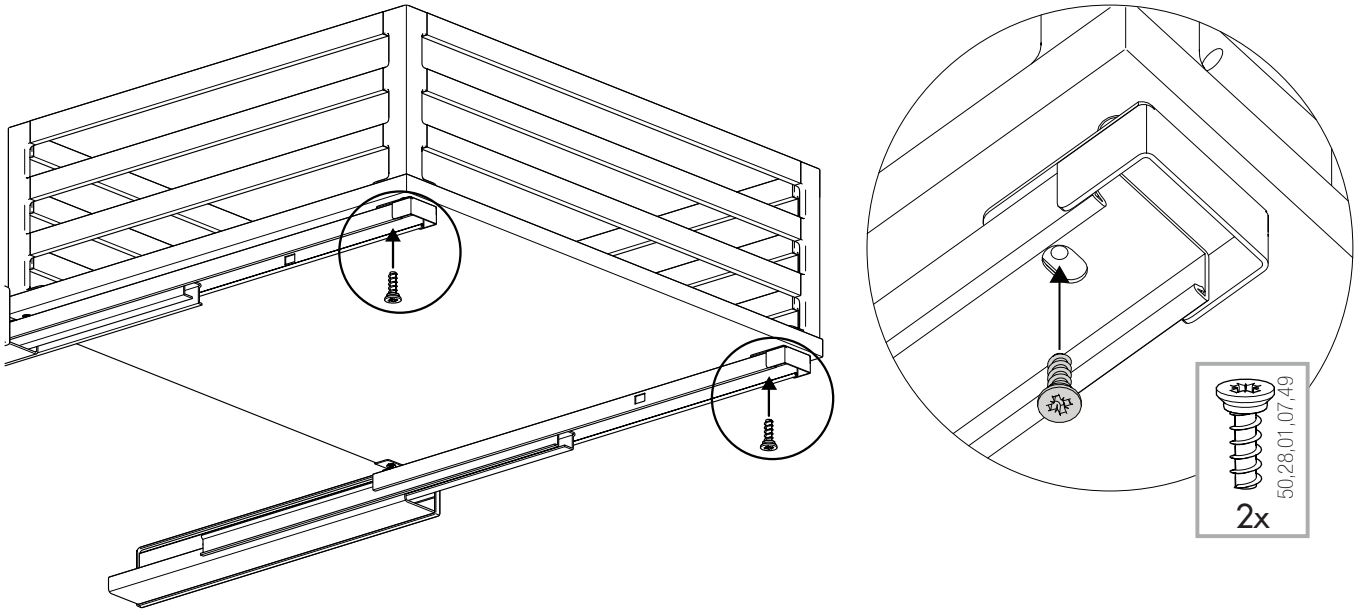


i


22mm

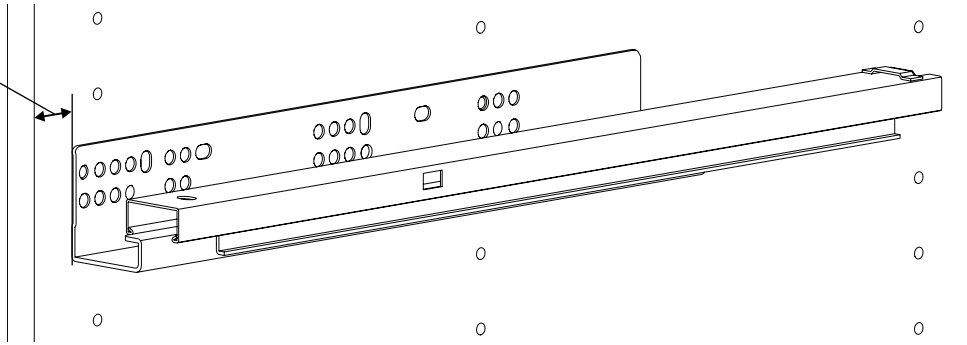

8

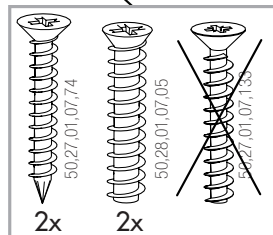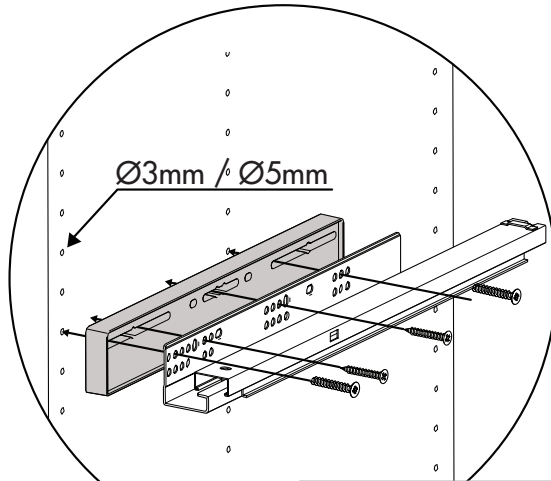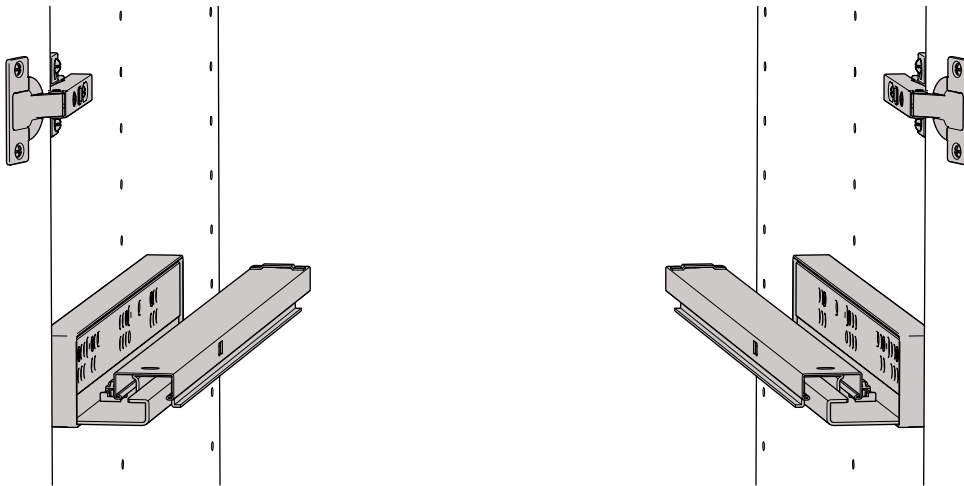

$\text{Ø}3\text{mm}$

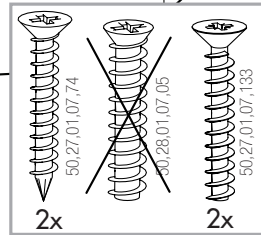

$\text{Ø}5\text{mm}$

